


INSTALLATION INSTRUCTIONS FOR 34318-VUQ A/C - HEAT 4-WAY INLINE BULKHEAD

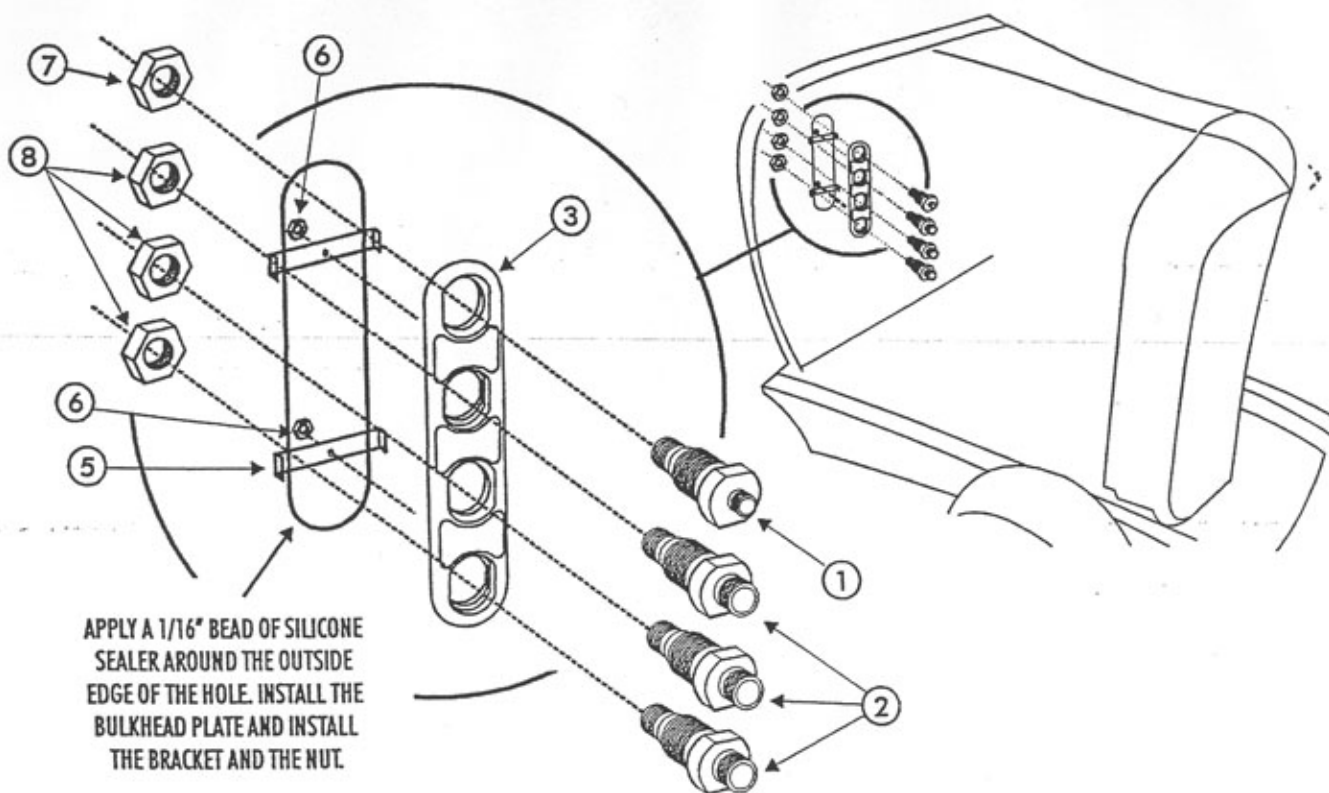

APPLY A 1/16" BEAD OF SILICONE SEALER AROUND THE OUTSIDE EDGE OF THE HOLE. INSTALL THE BULKHEAD PLATE AND INSTALL THE BRACKET AND THE NUT.

CUT THE TEMPLATE ON THE DOTTED LINES AND TAPE IN POSITION. TRACE AROUND THE TEMPLATE AND CUT OUT THE AREA.

DO NOT EXCEED THE DIMENSIONS GIVEN.

INSTALLATION INSTRUCTIONS FOR 34318-VUQ A/C & HEAT 4-WAY INLINE BULKHEAD

No	PART NUMBER	PART DESCRIPTION	QTY.
1.	35331-VUQ	#6 A/C BULKHEAD FITTING	1
2.	35333-VUQ	#10 A/C BULKHEAD FITTING	3
3.	34009-VUQ	INLINE 4-WAY-RAW	1
4.	35335-VUQ	#10 BULKHEAD FITTING NUT	4
5.	40133-VUB	2-WAY BULKHEAD RETAINING BRACKET	2
6.	18150-VUB	10-32 HEX MACHINE NUT	2

7/28/98 34317-VUQ 2 BULK BULKHEAD

