




www.vintageair.com

Packing List: Anodized Front Runner™ Kit (174008) Small Block Chevrolet with Power Steering

No.	Qty.	Part No.	Description
1.	1	17631-SCH	Bracket, Main, Anodized
2.	1	17632-SCH	Bracket, Tensioner, Anodized
3.	1	17633-SCH	Bracket, Power Steering, Anodized
4.	4	18021-SCH	Spacer, .409" Length, Anodized
5.	1	18022-SCH	Spacer, .290" Length, Anodized
6.	2	18023-SCH	Spacer, .330" Length, Anodized
7.	2	17625-SCH	Standoff, Tensioner, Anodized
8.	2	17626-SCH	Standoff, Power Steering Bracket, Anodized
9.	1	17607-SCR	Tensioner Spacer
10.	1	18601-PDS	Dowel Pin, 1/4" x 3/4"
11.	1	73321-SCH	Pulley, Water Pump, Hardcoat
12.	1	73312-SCH	Pulley, Crankshaft/Harmonic Balancer, Hardcoat
13.	1	733002-PFH	Pulley, Power Steering, Hardcoat
14.	1	39603-SCH	Tensioner
15.	1	18901-HKT	Hardware Kit
16.	1	72111-SCR	Water Pump with 5/8" Pilot (Reverse Rotation)
17.	1	726150-MUR	Belt, 61 1/2" Serpentine
18.	1	17608-SCH	Washer, Hat
19.	1	046768-MTR	Compressor, 6.1 CID Drilled Multi-Groove, Standard
20.	1	040707	Alternator, 170-Amp, Standard
21.	1	851001	Power Steering Pump with Integrated Reservoir
22.	1	501011	Heater Fitting, 5/8" x 1/2" NPT x 4 1/2", 45°
23.	1	044093	Clutch Cover Assembly, Anodized
24.	1	044091	Tensioner Cover Assembly, Anodized
25.	1	045000	Compressor Block, 7B10
26.	1	220013	Alternator Cable Kit

Checked By: _____
Packed By: _____
Date: _____

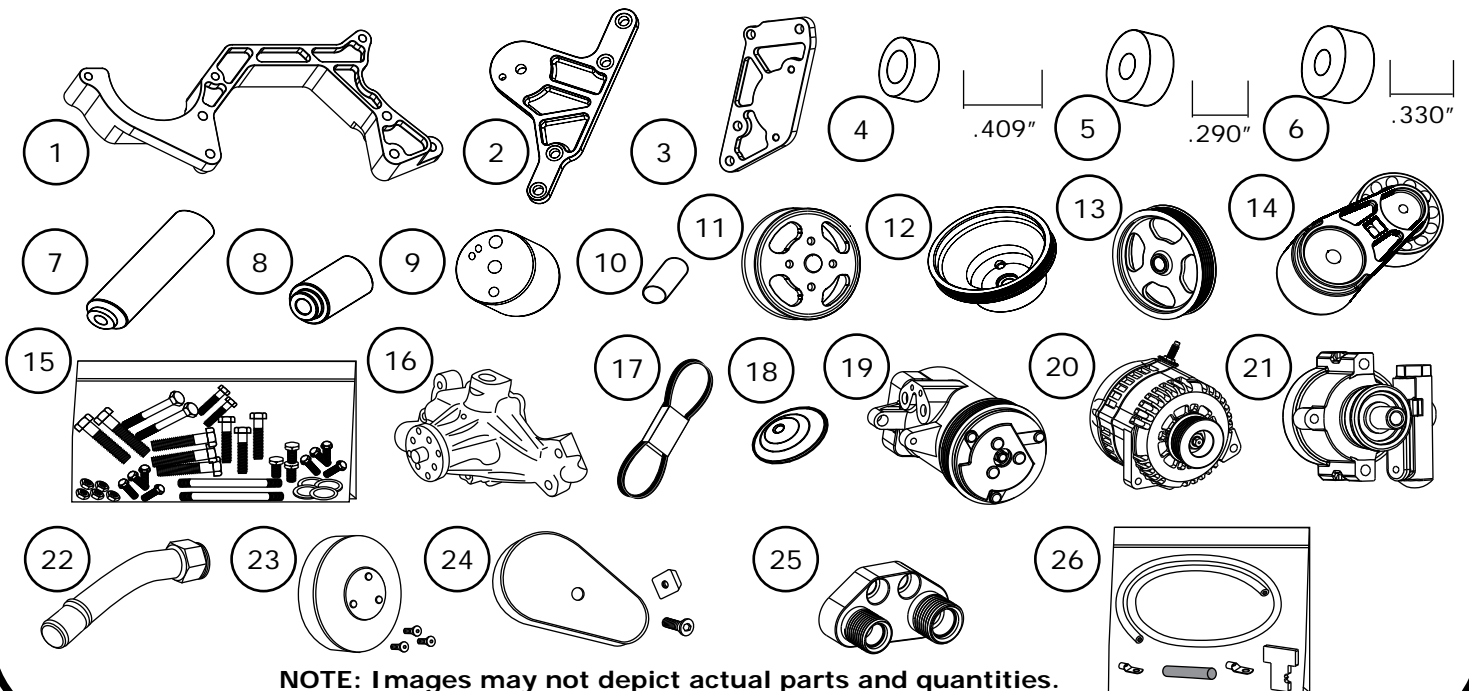

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**