


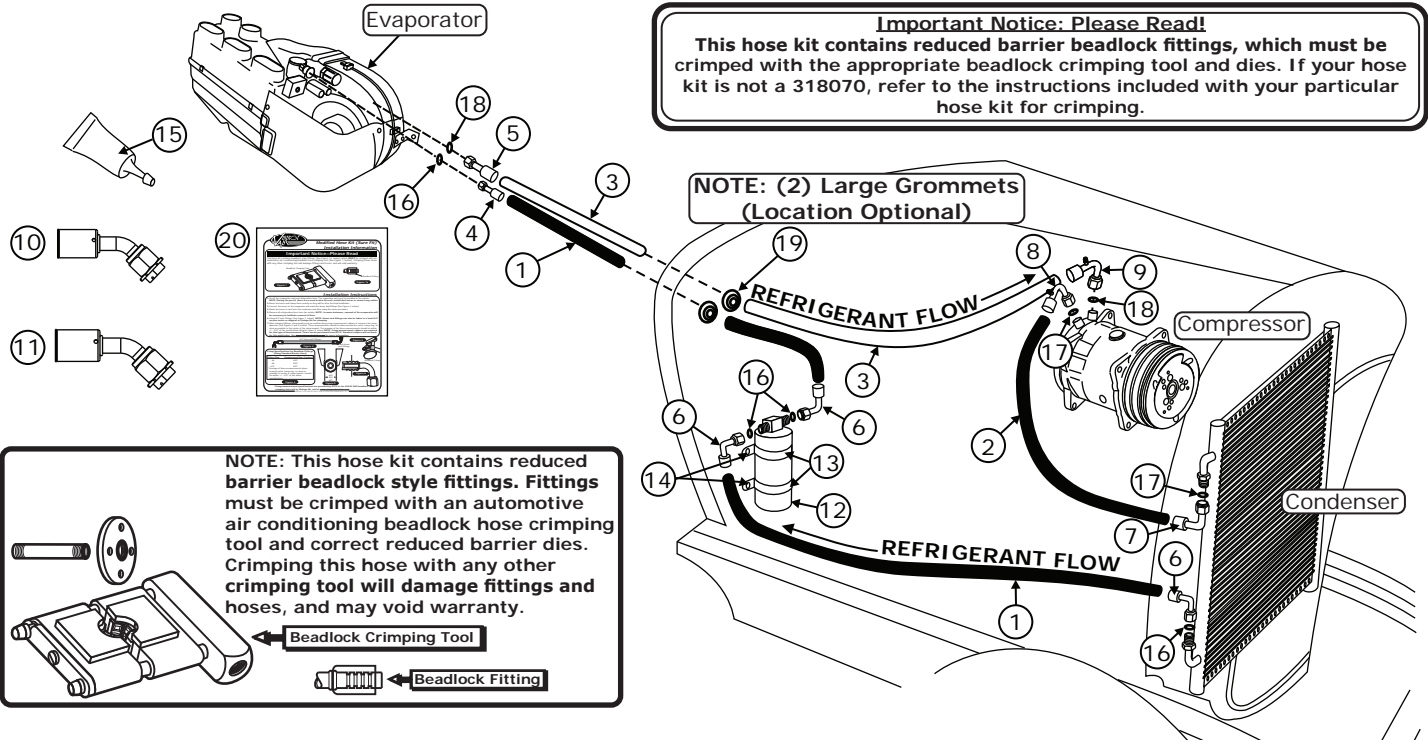

www.vintageair.com

# 12-Fitting Universal Reduced Barrier with Drier, without Bulkhead Beadlock Hose Kit (318070)

**Important Notice: Please Read!**  
 This hose kit contains reduced barrier beadlock fittings, which must be crimped with the appropriate beadlock crimping tool and dies. If your hose kit is not a 318070, refer to the instructions included with your particular hose kit for crimping.



## Packing List:

No.	Qty.	Part No.	Description
1.	84"	318540	A/C Hose, #6, Reduced Barrier
2.	57"	318550	A/C Hose, #8, Reduced Barrier
3.	72"	318560	A/C Hose, #10, Reduced Barrier
4.	1	358110	Beadlock Fitting, #6 Female, Straight, RB
5.	1	358130	Beadlock Fitting, #10 Female, Straight, RB
6.	3	358310	Beadlock Fitting, #6 Female, 90°, RB
7.	1	358320	Beadlock Fitting, #8 Female, 90°, RB
8.	1	355420	Beadlock Fitting, #8 Female, 135° with Service Port, RB
9.	1	355430	Beadlock Fitting, #10 Female, 135° with Service Port, RB
10.	1	358210	Beadlock Fitting, #6 Female, 45°, RB
11.	1	358220	Beadlock Fitting, #8 Female, 45°, RB
12.	1	07321-VUC	Drier
13.	2	07113-VUB	Drier Clamp
14.	2	18247-VUB	Screw, #10 x 1/2", Sheet Metal
15.	1	41117-VUP	Refrigerant Oil
16.	4	33857-VUF	O-ring, #6
17.	2	33858-VUF	O-ring, #8
18.	2	33859-VUF	O-ring, #10
19.	4	33137-VUI	Grommet, Large
20.	1	900002	Instruction, Modified Hose Kit

Checked By: \_\_\_\_\_  
 Packed By: \_\_\_\_\_  
 Date: \_\_\_\_\_

18865 Goll St. San Antonio, TX 78266  
 Phone: 800-862-6658  
 Sales: sales@vintageair.com  
 Tech Support: tech@vintageair.com  
 www.vintageair.com