



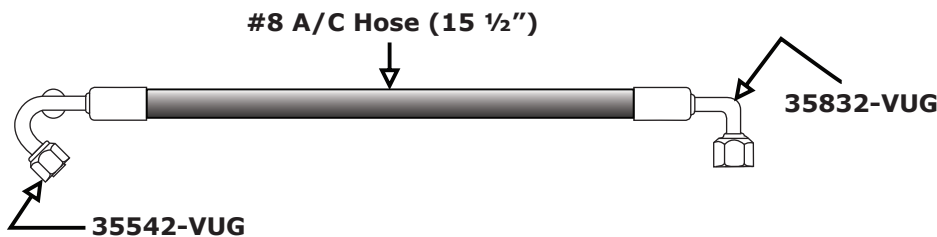


www.vintageair.com

# Standard Hose Kit (54181-LTA-A) Toyota Land Cruiser

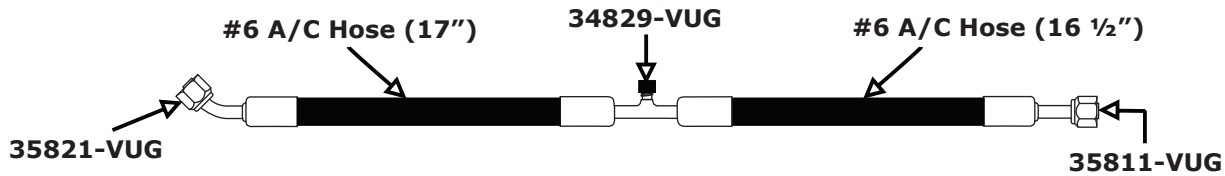

**NOTE: VERY IMPORTANT**

135° Fitting Laying Flat,  
#8 90° Fitting Insert Up  
At a 45° Angle As Shown.

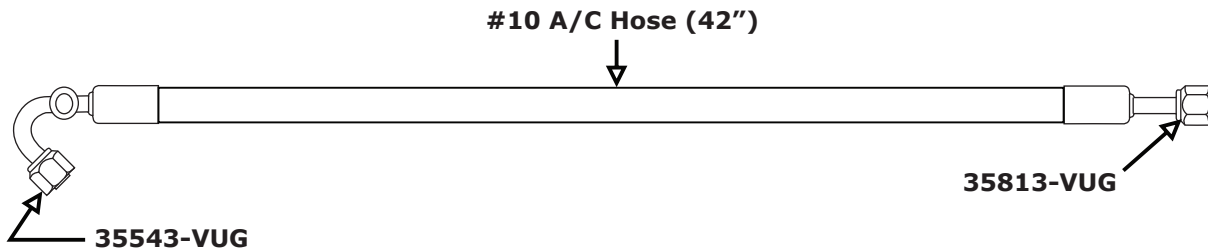

## Parts List

No.	Qty.	Part No.	Description
1.	1	11078-VUS	Binary Switch, Female
2.	2	18150-VUB	Nut, 10-32
3.	2	18250-VUB	Screw, 10-32 x 1/2"
4.	1	20510-VUM	Box, 14" x 14" x 4"
5.	1	21050-VUP	Bag, 4" x 6"
6.	1	23131-VUW	Compressor Lead, 13"
7.	2	31601-VUD	Adel Clamp, #10
8.	2	31602-VUD	Adel Clamp, #6
9.	33.5"	31854-VUD	Hose, #6 A/C
10.	15.5"	31855-VUD	Hose, #8 A/C
11.	42"	31856-VUD	Hose, #10 A/C
12.	2	33857-VUF	O-ring, #6
13.	2	33858-VUF	O-ring, #8
14.	2	33859-VUF	O-ring, #10
15.	1	34829-VUG	Fitting, #6, Splicer with Safety Switch Port
16.	1	35542-VUG	Fitting, #8, 135° with Service Port
17.	1	35543-VUG	Fitting, #10, 135° with Service Port
18.	1	35811-VUG	Fitting, #6, Straight
19.	1	35813-VUG	Fitting, #10, Straight
20.	1	35821-VUG	Fitting, #6, 45°
21.	1	35832-VUG	Fitting, #8, 90°
22.	1	41117-VUP	Refrigerant Oil