




www.vintageair.com

10-Fitting Universal Reduced Barrier Hose Kit without Drier (548003)

Important Notice: Please Read!
 This hose kit contains reduced barrier beadlock fittings, which must be crimped with the appropriate beadlock crimping tool and dies. If your hose kit is not a 548003, refer to the instructions included with your particular hose kit for crimping.

NOTE: 90° & straight evaporator fittings are included in Vintage Air hose kits (Straight fittings are recommended on Gen II series installations).

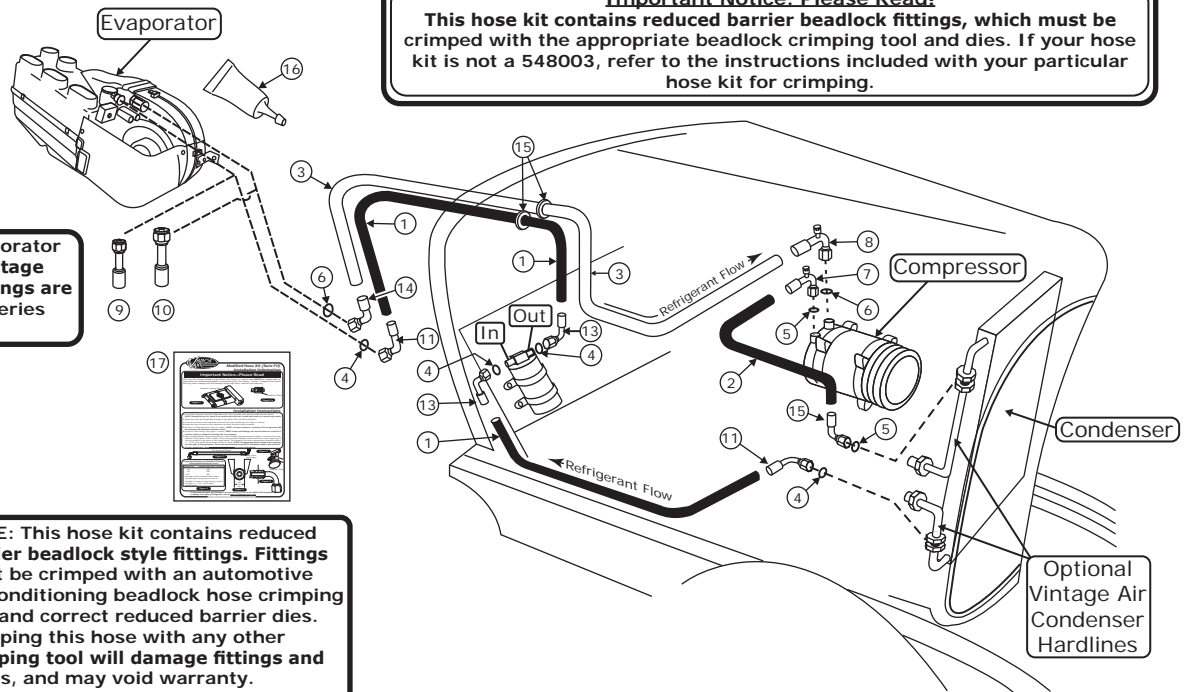

NOTE: This hose kit contains reduced barrier beadlock style fittings. Fittings must be crimped with an automotive air conditioning beadlock hose crimping tool and correct reduced barrier dies. Crimping this hose with any other crimping tool will damage fittings and hoses, and may void warranty.

← Beadlock Crimping Tool

← Beadlock Fitting

Packing List:

No.	Qty.	Part No.	Description
1.	72"	318540	A/C Hose, #6, Reduced Barrier
2.	48"	318550	A/C Hose, #8, Reduced Barrier
3.	60"	318560	A/C Hose, #10, Reduced Barrier
4.	5	33857-VUF	O-ring, #6
5.	2	33858-VUF	O-ring, #8
6.	3	33859-VUF	O-ring, #10
7.	1	355320	Beadlock Fitting, #8 Female, 90° with Service Port, RB
8.	1	355330	Beadlock Fitting, #10 Female, 90° with Service Port, RB
9.	1	358110	Beadlock Fitting, #6 Female, Straight, RB
10.	1	358130	Beadlock Fitting, #10 Female, Straight, RB
11.	2	358210	Beadlock Fitting, #6 Female, 45°, RB
12.	1	358220	Beadlock Fitting, #8 Female, 45°, RB
13.	2	358310	Beadlock Fitting, #6 Female, 90°, RB
14.	1	358330	Beadlock Fitting, #10 Female, 90°, RB
15.	4	33137-VUI	Grommet, Large
16.	1	41117-VUP	Refrigerant Oil
17.	1	900002	Instruction, Modified Hose Kit

Checked By: _____
 Packed By: _____
 Date: _____

18865 Goll St. San Antonio, TX 78266
 Phone: 800-862-6658
 Sales: sales@vintageair.com
 Tech Support: tech@vintageair.com
 www.vintageair.com